



NOTES

1. 2 - 1 SECTION AMBER 12" SIGNAL HEAD
2. PEDESTAL POLE
3. #14 THHN WIRE
4. INSTALL SERVICE PEDESTAL PER US 26 OF THE FARMINGTON ELECTRIC UTILITY METER & DEVICE GUIDE
5. 1" MINIMUM CONDUIT SIZE
6. FLASHER UNIT LOCATED IN PEDESTAL POLE BASE
7. DRIVER FEEDBACK SIGN